


Cut along black lines before laminating

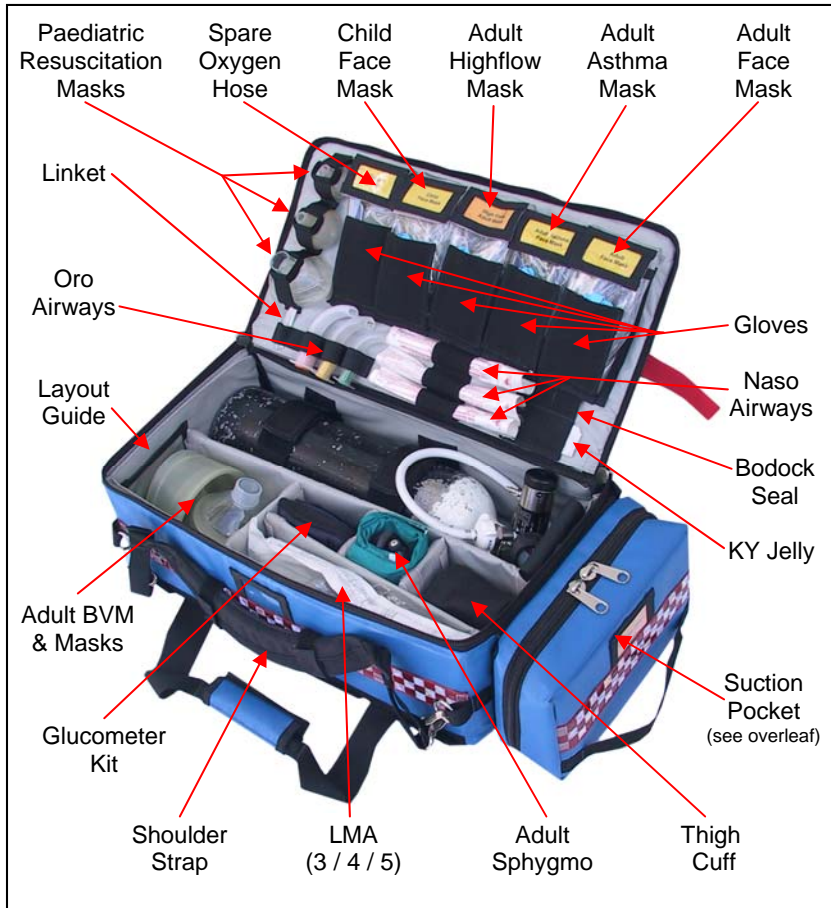

Regulator & High Pressure Hose Positioning

High pressure hose sits on top of cylinder (not underneath)



Regulator sits almost vertical

High pressure hose attaches to front high flow outlet

External Suction Pocket



This side to front when inserted into window

Fold here before laminating